




Water Master Folding Instructions

We strongly encourage you to take time to learn how to fold your Water Master properly. It will save you time and effort in the long run. If your Water Master is still in the original packaging, review these instructions as you unfold your new Water Master for the first time. If not, don't worry, a little practice is all it takes.

Your Water Master is designed to be unpacked and repacked into a very tight, compact package with each use. The most important things to remember are: Flip the raft over to start, start at the front, and fold not roll. All the fabric ultimately ends up on the top of the rigid seat platform. Folding only takes a few minutes.

Step 1-2: Open both air valves in the locked position and depressurize the raft. Flip the raft over so that the bottom of the raft is facing up. Fold one side of the raft towards the center as seen in picture 1. Crease along the stripe tape as you fold the raft for best results. Repeat this fold on the other side of the raft as shown in picture 2. Notice the shirt collar fold at the end of the raft.

Step 3: Move to the front of the raft and begin to fold, not roll, the front of the raft towards the oar locks as shown in picture 3. There are a total of four folds to get the front of the raft on the rigid platform and each fold should be about twelve to fourteen inches long. The third fold should bring the fabric about half way up the oar locks and the fourth right on top of the rigid platform.

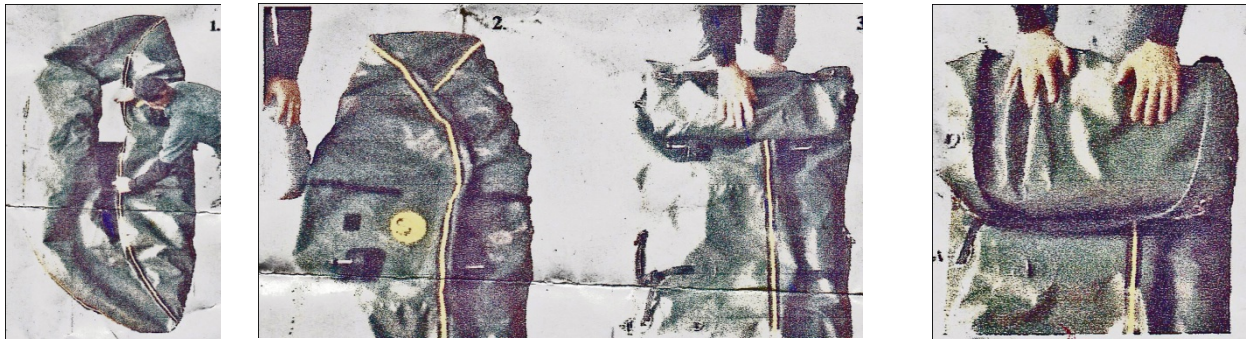

Step 4: Now kneel on the front of the raft that you have just folded and face the back, as seen in picture 5.

Step 5: There are a total of three folds to finish folding the raft. The folds should be the same size as the front. The third fold brings the cargo deck of the boat on top top of the rigid platform as seen in picture 6. Apply downward pressure and use your compression strap to keep the fold raft together.



***Check out the video instructions on our website!
www.bigskyinflatables.com***